



Illustrated Parts List

Model Series

122Q00

TYPE NUMBERS
0111 through 0174.

TABLE OF CONTENTS

Air Cleaner	8
Blower Housing	5
Camshaft	2
Carburetor	9
Carburetor Overhaul Kit	9
Controls	10
Covers/Guards	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	7
Flywheel	5
Fuel Supply	6
Gasket Set - Engine	4
Gasket Set - Valve	3
Governor Spring	10
Ignition	11
Lubrication	6
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	5
Sump	4
Thermostat	10
Valves	3
Warning Label	2



 
 
 
 
 
 
 
PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.


1036 EMISSIONS LABEL

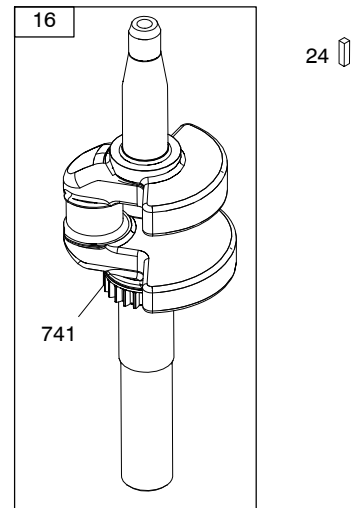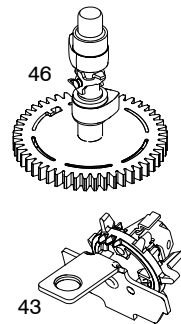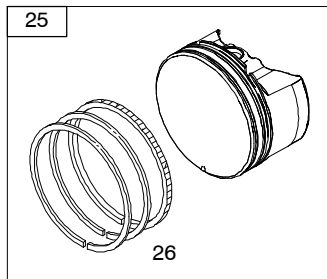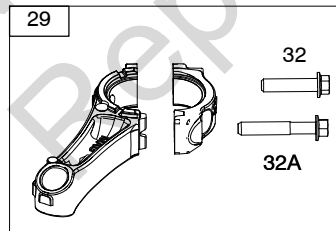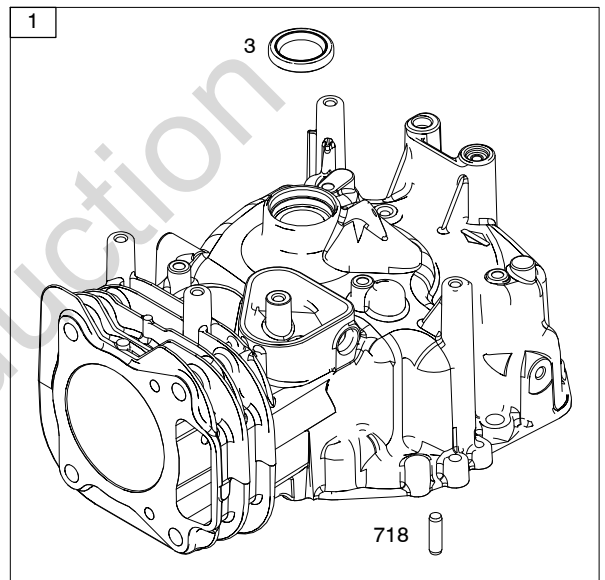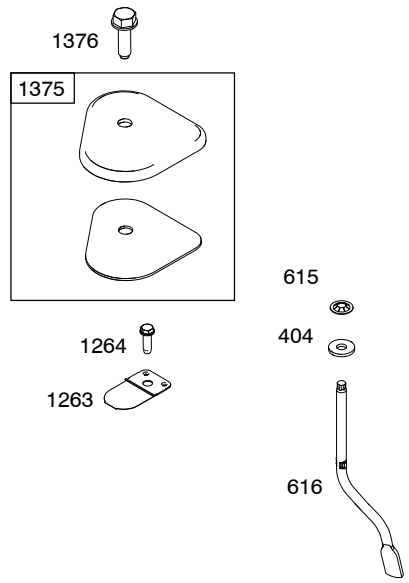







Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

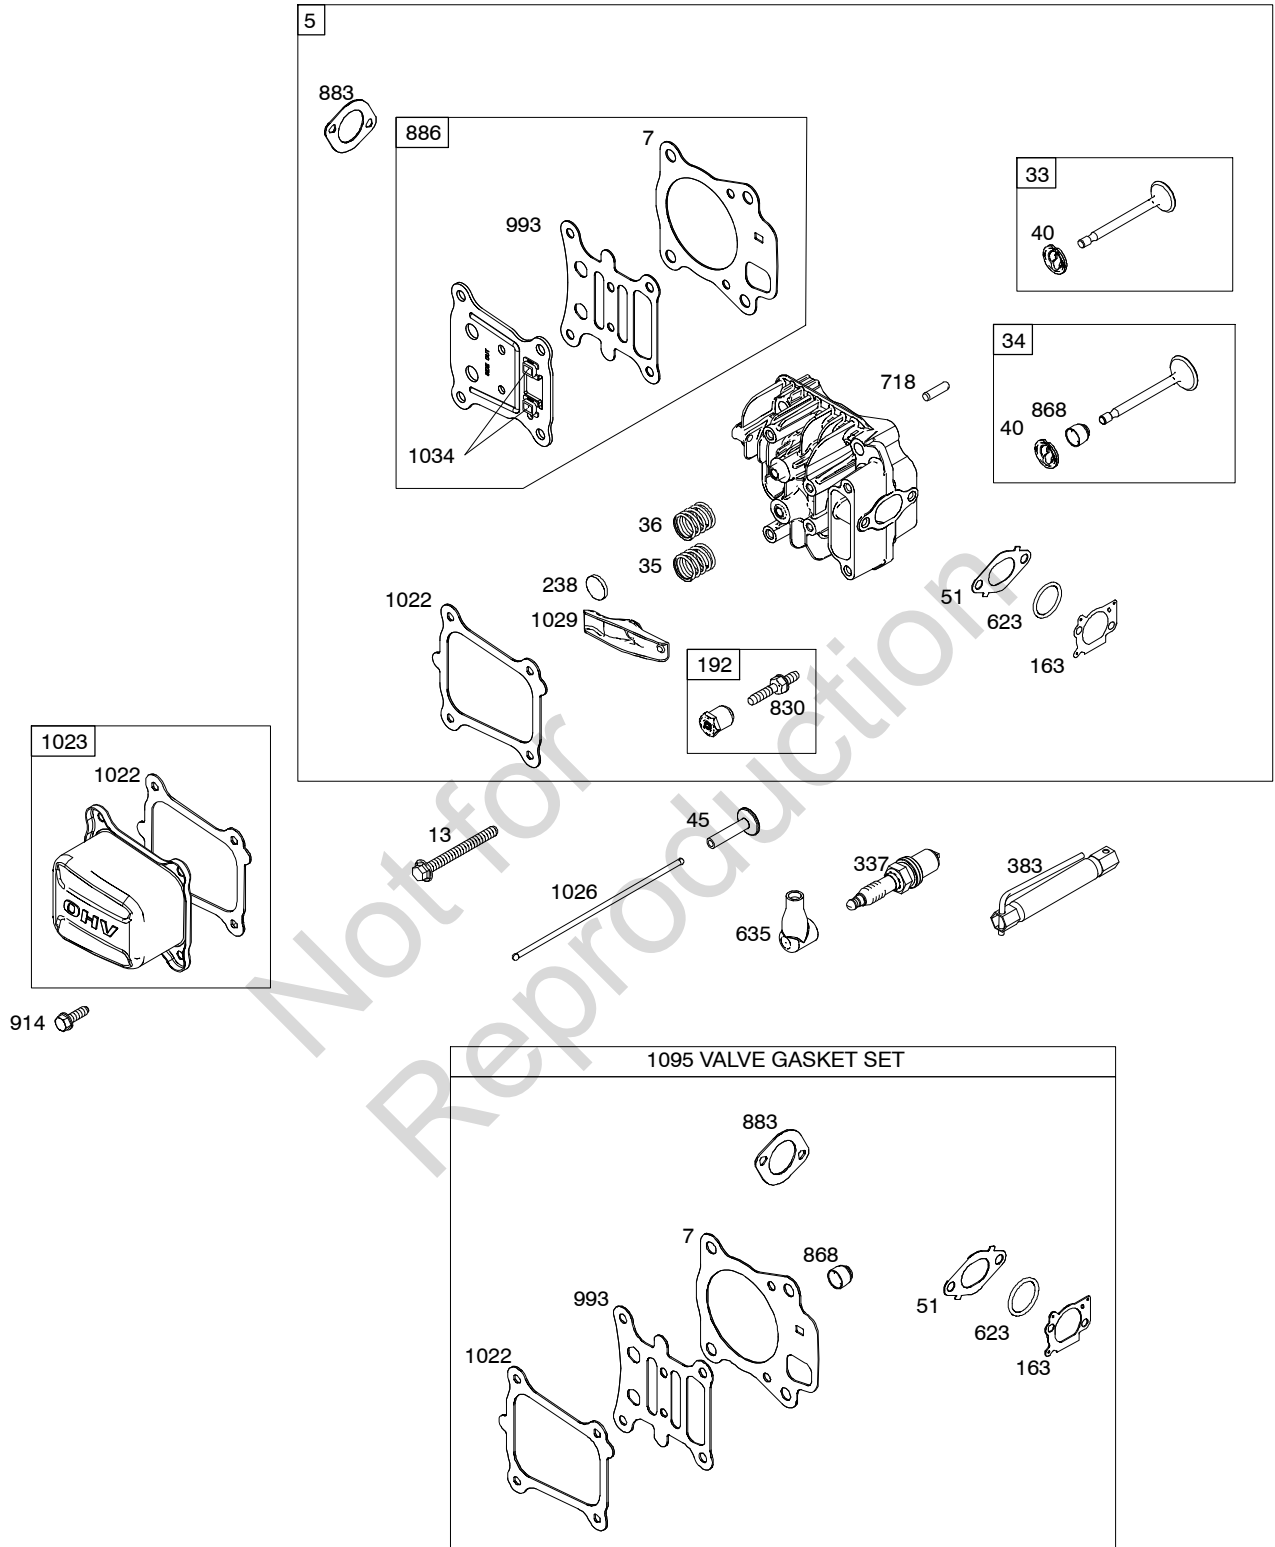 










Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

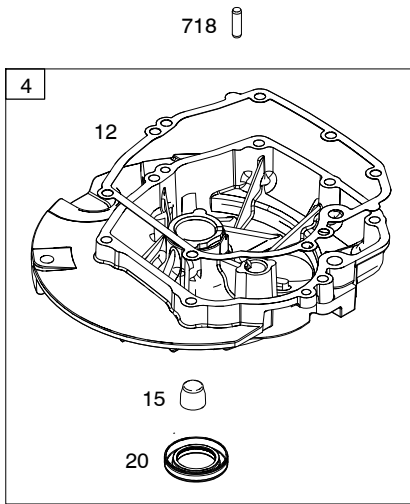 








718 

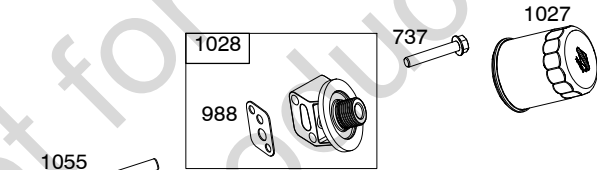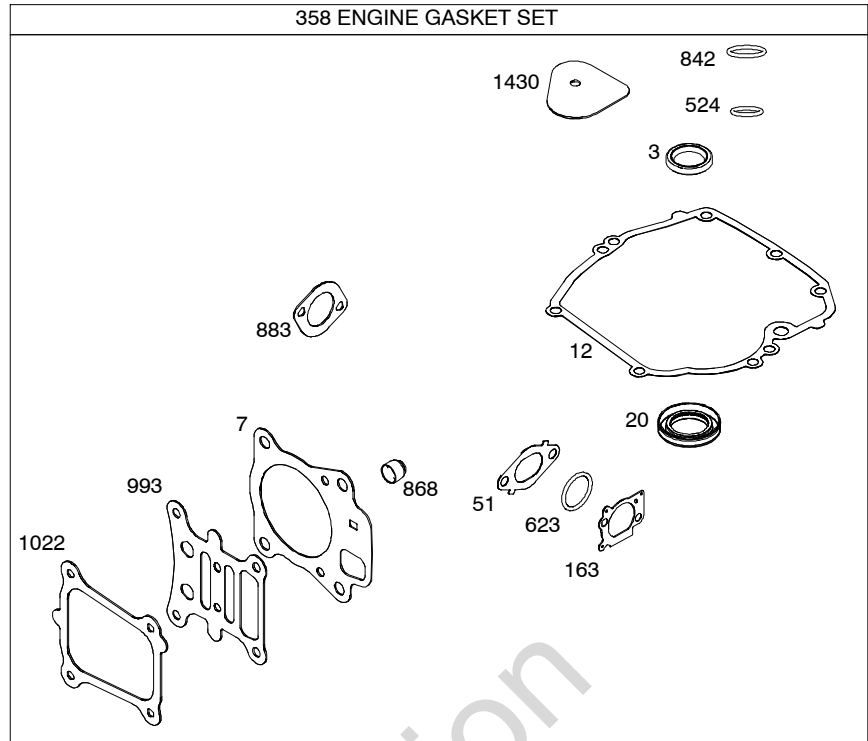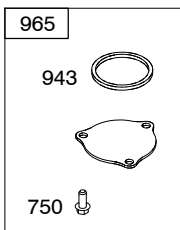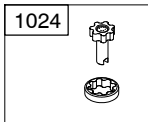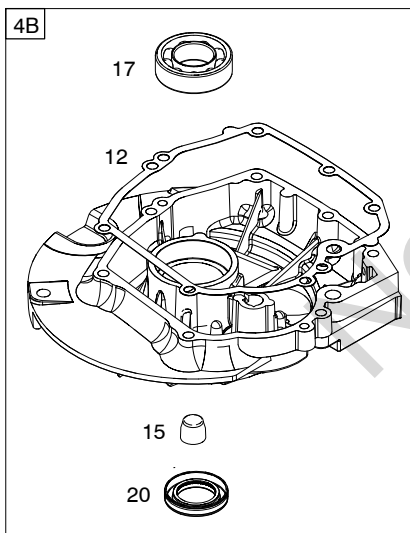      


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

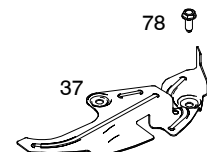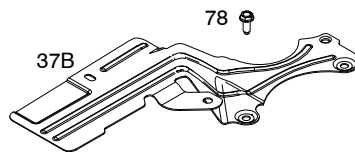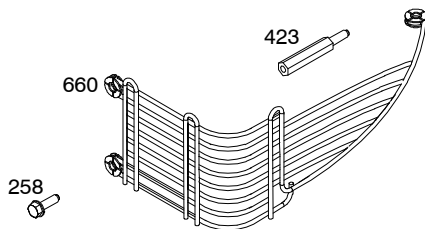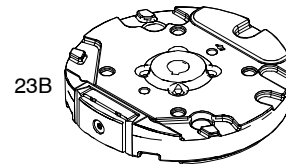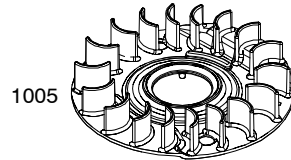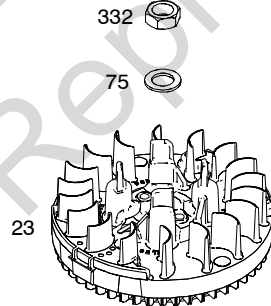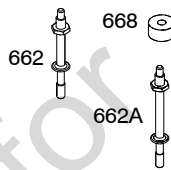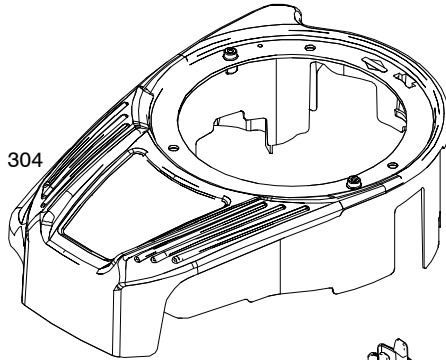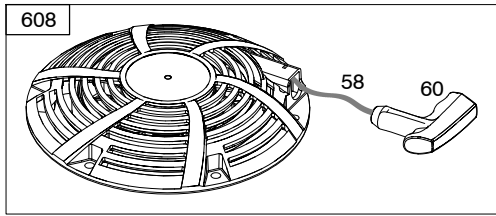         


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

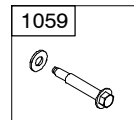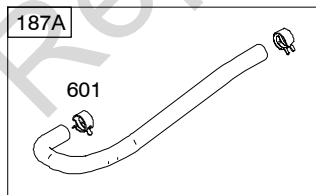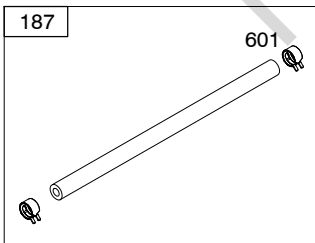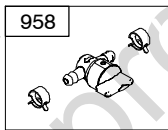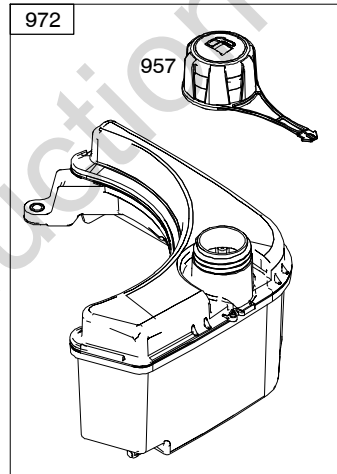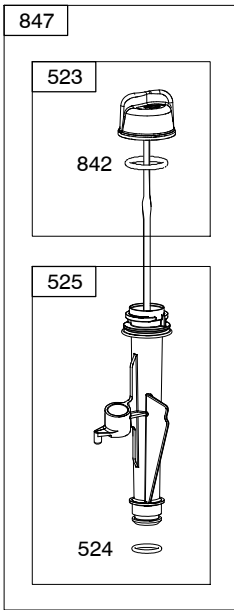       


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

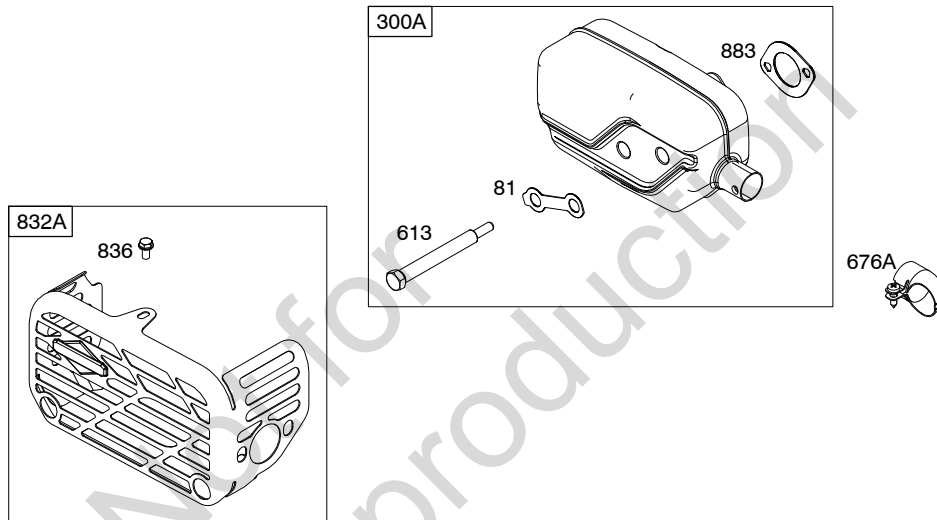 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

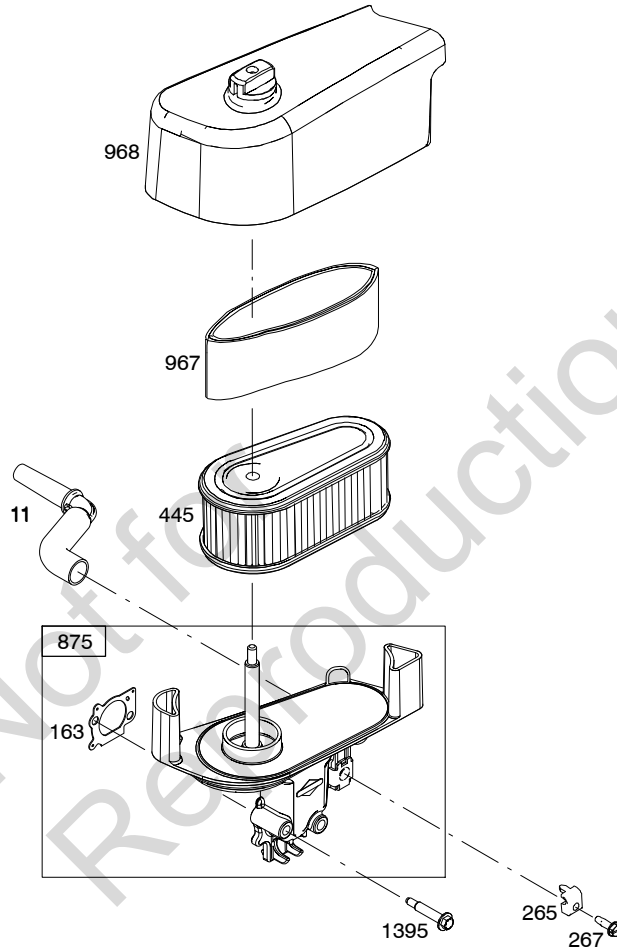 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

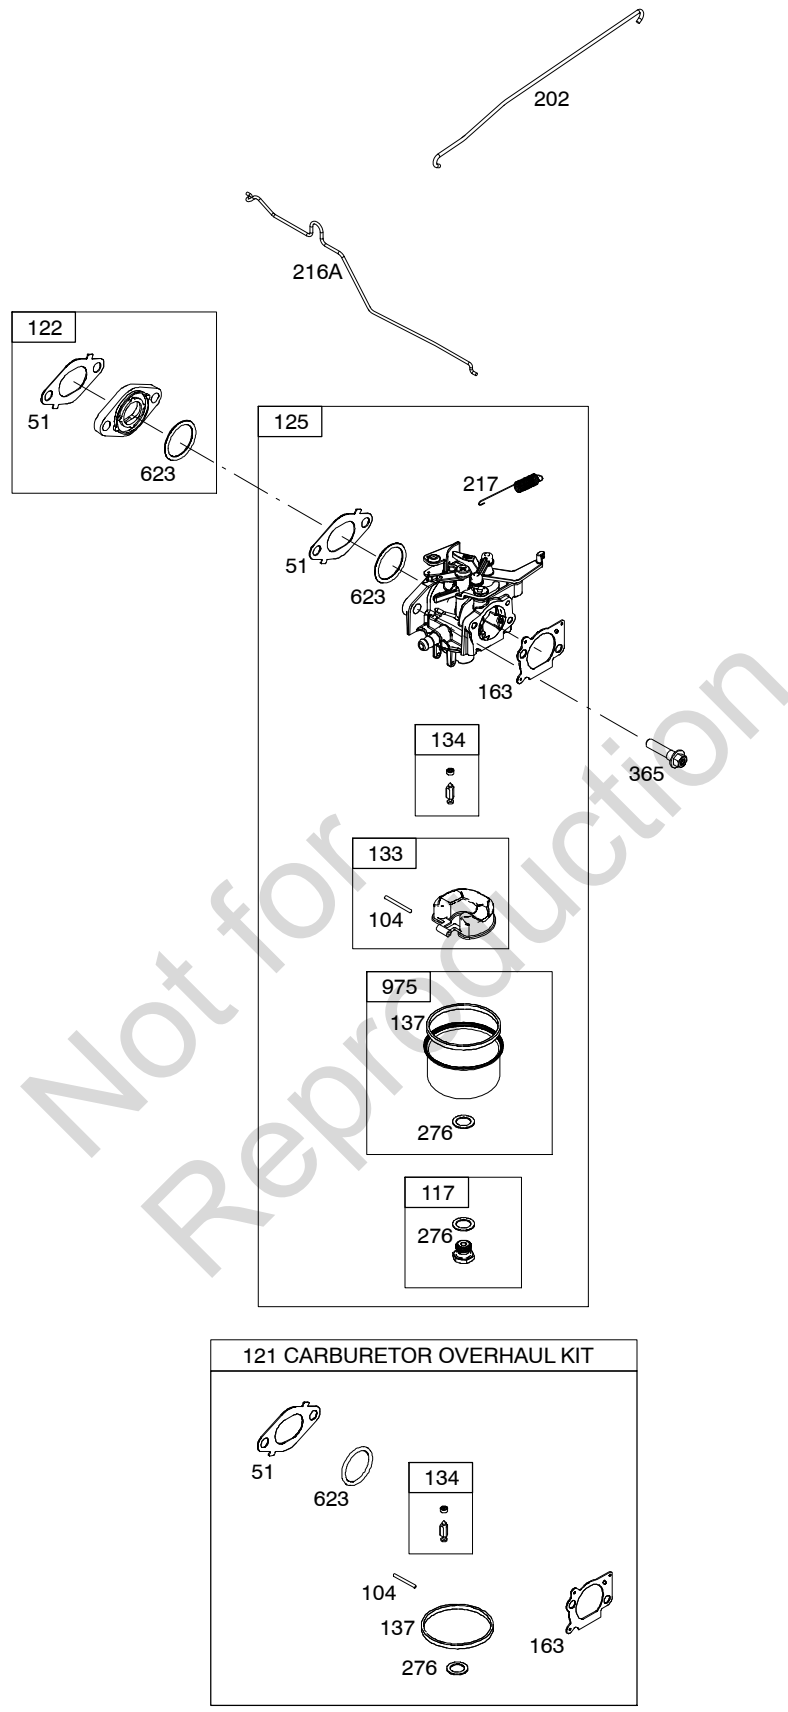 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

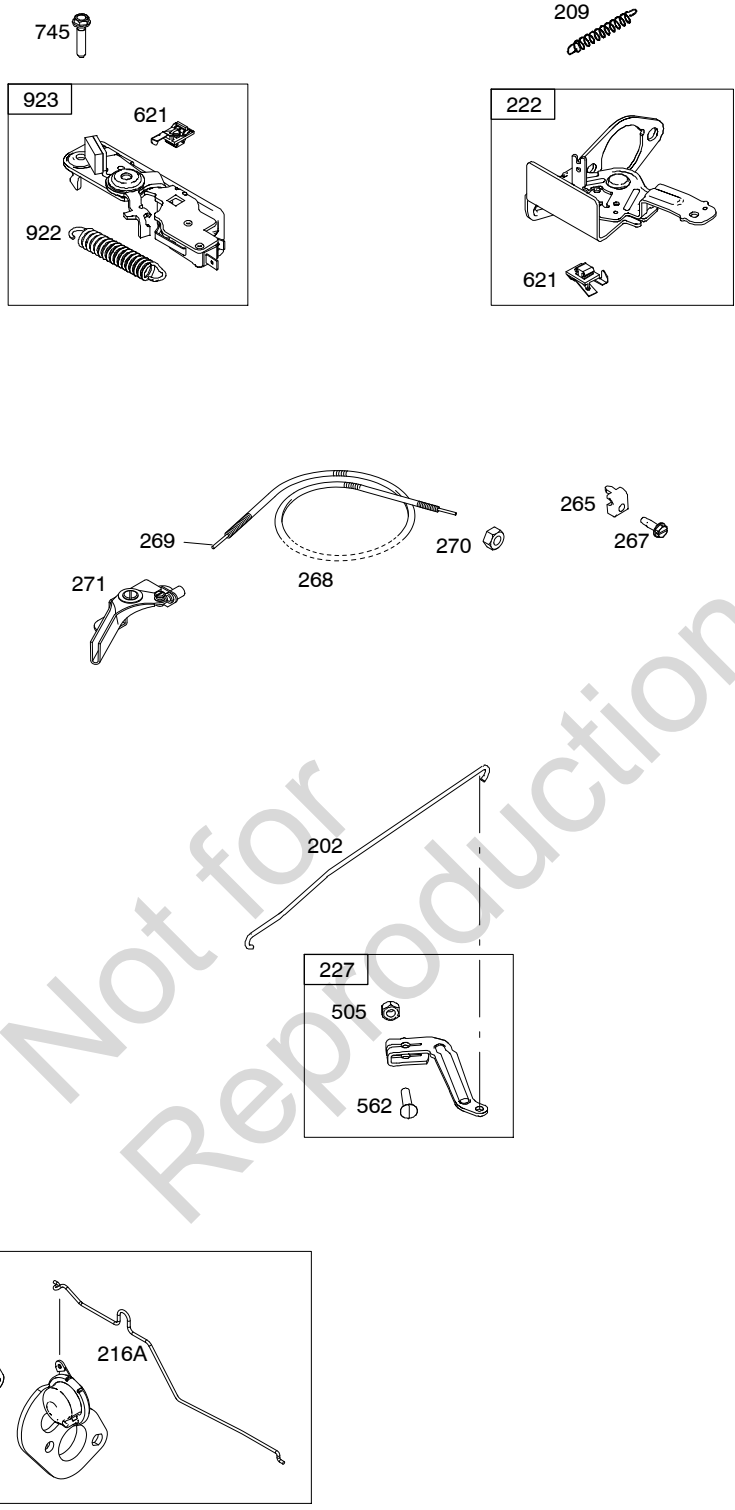 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

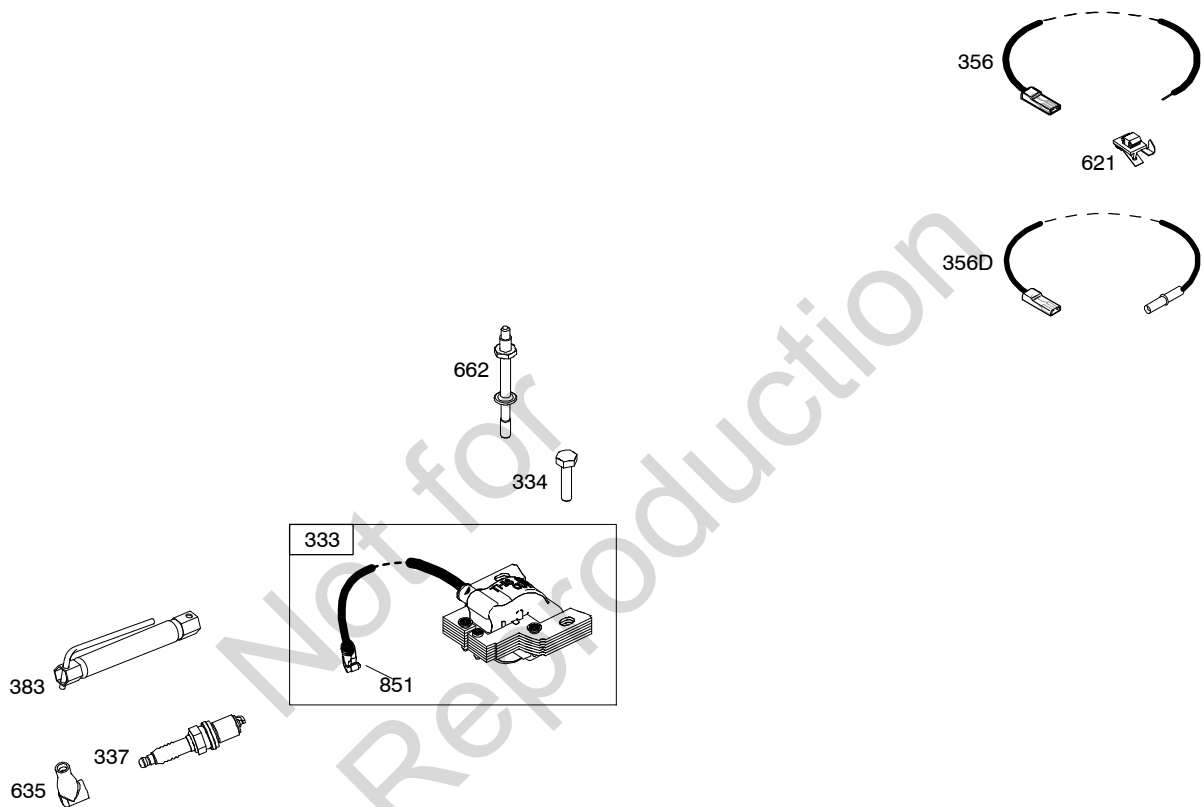 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

122Q00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	798947	Cylinder Assembly	23B	796621	Flywheel (Cast Iron) Used on Type No(s). 0114, 0115, 0118, 0121, 0123, 0131, 0138, 0154, 0170, 0171.	43	796650	Slinger-Governor/Oil Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0171, 0174.
3	299819S	Seal-Oil (Magneto Side)	24	222698S	Key-Flywheel			
4	493279	Sump-Engine Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0171, 0174.	25	797302	Piston Assembly (Standard) ----- Note ----- 797303 Piston Assembly (.020" Oversize)			
4B	692509	Sump-Engine Used on Type No(s). 0121, 0170.	26	797304	Ring Set (Standard) ----- Note ----- 797305 Ring Set (.020" Oversize)	45	690977	Tappet-Valve
5	796471	Head-Cylinder	27	691588	Lock-Piston Pin	46	694039	Camshaft Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0171, 0174.
7	796475	Gasket-Cylinder Head	28	298909	Pin-Piston			
11	796478	Tube-Breather	29	796470	Rod-Connecting			
12	692232	Gasket-Crankcase	32	691664	Screw (Connecting Rod)			
13	793451	Screw (Cylinder Head)	32A	695759	Screw (Connecting Rod)			
15	691680	Plug-Oil Drain (Square Socket)	33	499642	Valve-Exhaust	51	796596	Gasket-Intake
16	796468	Crankshaft Used on Type No(s). 0111, 0142, 0160, 0164. ----- Note ----- 796469 Crankshaft Used on Type No(s). 0114, 0115, 0116, 0123, 0126, 0138, 0139, 0154, 0169, 0171, 0174. 796924 Crankshaft Used on Type No(s). 0118, 0121, 0131, 0170.	34	499642	Valve-Exhaust	58	697316	Rope-Starter (Cut To Required Length)
17	692517	Bearing-Ball Used on Type No(s). 0121, 0170.	35	795443	Valve-Intake	60	281434S	Grip-Starter Rope
20	399781S	Seal-Oil (PTO Side)	36	691304	Spring-Valve (Intake)	60A	795426	Grip-Starter Rope
22	691092	Screw (Crankcase Cover/Sump)	37	691304	Spring-Valve (Exhaust)	75	691736	Washer (Flywheel) Used on Type No(s). 0111, 0116, 0126, 0139, 0142, 0160, 0164, 0169, 0174.
23	793619	Flywheel (Aluminum) Used on Type No(s). 0111, 0116, 0126, 0139, 0142, 0160, 0164, 0169, 0174.	37B	796536	Guard-Flywheel	78	793480	Screw (Flywheel Guard)
			37B	799155	Guard-Flywheel Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	81	691740	Lock-Muffler Screw
			40	692194	Retainer-Valve	104	797622	Pin-Float Hinge

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10228-12 Assemblies include all parts shown in frames. 09/16/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	799227	Jet-Main (Standard) Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	137	797625	Gasket-Float Bowl Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	222	796482	Bracket-Control (Manual Friction, Remote, & Fixed Speed Control)
121	799235	Kit-Carburetor Overhaul Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	163	691894	Gasket-Air Cleaner	227	796487	Lever-Governor Control
122	796595	Spacer-Carburetor	187	791766	Line-Fuel (Cut To Required Length)	238	691300	Cap-Valve
125	799226	Carburetor Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	187A	796491	Line-Fuel (Formed Hose)	258	794451	Screw (Control Guard Bracket) Used on Type No(s). 0154, 0164, 0169.
133	797626	Float-Carburetor Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	192	796631	Adjuster-Rocker Arm	265	690798	Clamp-Casing ----- Note ----- 691024 Clamp-Casing Used on Type No(s). 0116, 0142, 0160.
134	799177	Kit-Needle/Seat Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	202	796657	Link-Mechanical Governor	267	691044	Screw (Casing Clamp)
			209	793604	Spring-Governor Used on Type No(s). 0131. ----- Note ----- 796483 Spring-Governor Used on Type No(s). 0126, 0139, 0164, 0174. 796484 Spring-Governor Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0138, 0142, 0154, 0160, 0169, 0170, 0171.	268	691025	Casing-Control Wire (Cut To Required Length)
			216A	798944	Link-Choke Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	269	691026	Wire-Control (Cut To Required Length)
			217	799179	Spring-Choke Return Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	270	691027	Nut (Control Wire Casing)
						271	691028	Lever-Control
						276	797632	Washer-Sealing Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.
						291A	798938	Thermostat Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.
						300A	798940	Muffler-Exhaust Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.

122Q00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	796692	Housing-Blower (Rewind Start) Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0170, 0171, 0174. ----- Note ----- 797374 Housing- Blower (Rewind Start) Used on Type No(s). 0169.	356	692390	Wire-Stop Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0131, 0138, 0139, 0142, 0160, 0164, 0169, 0170, 0174. ----- Note ----- 796798 Wire-Stop Used on Type No(s). 0126, 0171.	592	793481	Nut (Rewind Starter)
332	690662	Nut (Flywheel)	356D	697397	Wire-Stop Used on Type No(s). 0154.	601	791850	Clamp-Hose
333	796499	Armature-Magneto Used on Type No(s). 0111, 0116, 0126, 0139, 0142, 0160, 0164, 0169, 0174. ----- Note ----- 796500 Armature- Magneto Used on Type No(s). 0114, 0115, 0118, 0121, 0123, 0131, 0138, 0154, 0170, 0171.	358	796661	Gasket Set-Engine	608	796497	Starter-Rewind
334	793454	Screw (Magneto Armature)	363	19069	Puller-Flywheel	613	796496	Screw (Muffler)
337	692051	Plug-Spark Used on Type No(s). 0116, 0142. ----- Note ----- 692720 Plug-Spark Used on Type No(s). 0111, 0114, 0115, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	365	793458	Screw (Carburetor)	615	796674	Retainer-Governor Shaft
			383	19576S	Wrench-Spark Plug	616	798327	Crank-Governor
			404	690272	Washer (Governor Crank)	621	692310	Switch-Stop
			423	798322	Stud (Control Guard Bracket) Used on Type No(s). 0164, 0169.	623	793628	Seal-O Ring (Carburetor Spacer)
			445	795066	Filter-Air Cleaner Cartridge	635	66538S	Boot-Spark Plug
			455	796615	Cup-Flywheel Used on Type No(s). 0114, 0115, 0118, 0121, 0123, 0131, 0138, 0154, 0170, 0171.	660	798323	Bracket-Control Guard Used on Type No(s). 0164, 0169.
			505	793515	Nut (Governor Control Lever)	662	796537	Stud (Rewind Starter)
			523	796503	Dipstick	662A	793479	Stud (Rewind Starter)
			524	692296	Seal-Dipstick Tube	668	797373	Spacer Used on Type No(s). 0169.
			525	796502	Tube-Dipstick	670	793485	Spacer-Fuel Tank
			562	793514	Bolt (Governor-Control Lever)	676A	799187	Deflector-Muffler Used on Type No(s). 0111, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0139, 0142, 0154, 0160, 0164, 0169, 0171, 0174.
						718	690959	Pin-Locating
						737	692511	Screw (Oil Filter Adapter) Used on Type No(s). 0121, 0170.
						741	795755	Gear-Timing
						745	698557	Screw (Brake) Used on Type No(s). 0111, 0126, 0139, 0164, 0169, 0174.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10228-14 Assemblies include all parts shown in frames. 09/16/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
750	691147	Screw (Oil Pump Cover) Used on Type No(s). 0121, 0170.	943	692514	Seal-O Ring (Oil Pump Cover) Used on Type No(s). 0126, 0160.	1026	796481	Rod-Push
830	796472	Stud-Rocker Arm	957	796577	Cap-Fuel Tank (EVAP)	1027	795990	Filter-Oil Used on Type No(s). 0121, 0170.
832A	798951	Guard-Muffler Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	957A	692046	Cap-Fuel Tank (Plastic)	1028	796522	Adapter-Oil Filter Used on Type No(s). 0121, 0170.
836	793500	Screw (Muffler Guard)	958	698183	Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0126, 0160.	1029	691230	Arm-Rocker
842	691031	Seal-O Ring (Dipstick Tube)	965	692507	Cover-Oil Pump Used on Type No(s). 0121, 0170.	1034	691343	Guide-Push Rod
847	796501	Dipstick/Tube Assembly	967	796254	Filter-Pre Cleaner	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)
851	493880S	Terminal-Spark Plug	968	796493	Cover-Air Cleaner	1055	796524	Tube-Oil Pump Used on Type No(s). 0121, 0170.
868	795440	Seal-Valve	972	796489	Tank-Fuel (EVAP)	1058	278415	Manual-Operator's
875	796492	Base-Air Cleaner	975	797631	Bowl-Float Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.	1059	793471	Kit-Screw/Washer
883	793497	Gasket-Exhaust	988	692515	Gasket-Oil Adapter Used on Type No(s). 0121, 0170.	1095	796662	Gasket Set-Valve
886	796474	Gasket Kit-Cylinder Head Plate	993	796473	Gasket-Cylinder Head Plate	1263	697124	Reed-Breather
914	794451	Screw (Rocker Arm Cover)	1005	796614	Fan-Flywheel Used on Type No(s). 0114, 0115, 0118, 0121, 0123, 0131, 0138, 0154, 0170, 0171.	1264	793453	Screw (Breather Reed)
922	692135	Spring-Brake Used on Type No(s). 0111, 0126, 0139, 0164, 0169, 0174.	1022	796480	Gasket-Rocker Cover	1319	794467	Label-Warning
923	796635	Brake Used on Type No(s). 0111, 0126, 0139, 0164, 0169, 0174.	1023	796479	Cover-Rocker Arm	1330	276781	Manual-Repair
925	796531	Cover-Linkage Used on Type No(s). 0114, 0115, 0116, 0118, 0121, 0123, 0131, 0138, 0142, 0154, 0160, 0170, 0171.	1024	692508	Pump-Oil Used on Type No(s). 0121, 0170.	1375	796476	Cover-Breather/Reed
						1376	794451	Screw (Breather/Reed Cover)
						1395	690349	Screw (Air Cleaner Base to Carburetor) Used on Type No(s). 0111, 0114, 0115, 0116, 0118, 0121, 0123, 0126, 0131, 0138, 0139, 0142, 0154, 0160, 0164, 0169, 0170, 0171, 0174.
						1430	796477	Gasket-Breather/Reed

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10228-15 Assemblies include all parts shown in frames. 09/16/2010

Not for
Reproduction

